




Step 1: Clear your Firearm - Check the Chamber, Bolt Face and Magazine Well.



- MCARBO Smith & Wesson SD9VE/SD40VE Trigger Spring Kit
- 2. 1/16" 3/32" and 1/4" Punch Set
- Hammer
- 4. Bench Block
- 5. Micro-Tip Flathead Screwdriver
- Synthetic Grease (w/PTFE)
- 7. Eye Protection.

Step 2: Gather Parts and Tools needed for Installation.




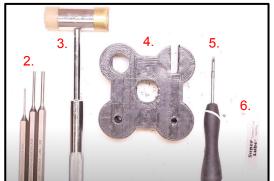

Step 3: Pull the Trigger. Pull the Slide back a drop, then Press the tab on the Side and Slide the Slide Forward.



Step 4: Compress and Remove the Recoil Spring and Guide Rod.

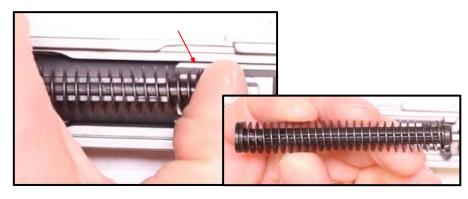

Download or Print Instructions | Contact: help@mcarbo.com | Page 2

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 5: Remove the Barrel by Pushing up from the Other Side.






Step 6: Compress the Striker Block Sleeve with your Micro-Tip. Simultaneously Push up on the Back Plate to Remove it.






Step 7: Pull out the Striker Assembly.

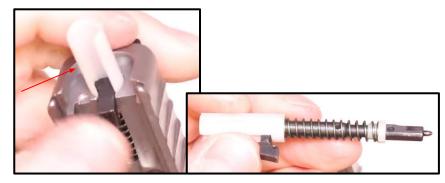

Step 8: Use your 1/16" Punch to Tap out the Extractor Hinge Pin about Halfway..

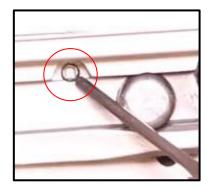



Download or Print Instructions | Contact: help@mcarbo.com | Page 3





Step 9: Pull out your Punch. Remove the Extractor and Striker Block Safety.





Step 10: Open your MCARBO S&W SD9VE/SD40VE Trigger Spring Kit.






Step 11: Put some Synthetic Grease on the New Striker Block Safety Spring, then Insert it into the Striker Block Safety.






Step 12: Drop the Striker Block Safety back into the Slide.

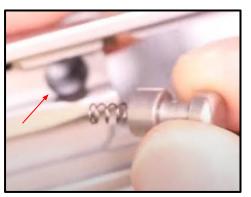



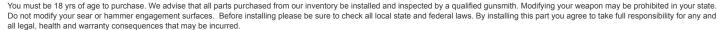




Step 13: Push in on the Striker Block Safety and Reinsert the Extractor.






Step 14: Keep the Extractor Compressed as you Tap in the Extractor Hinge Pin with your Hammer. Tap it in enough to Capture the Extractor.



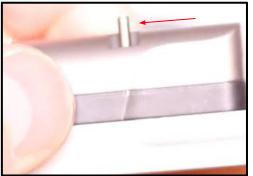


Step 15: Use your 1/8" Punch to Tap in the Pin the Rest of the Way. Use your 1/16" Punch to Make sure it is Recessed on Both Sides.



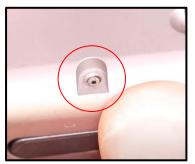

Step 16: Grab your Striker Assembly. Push the Step Portion down on your Bench Block.



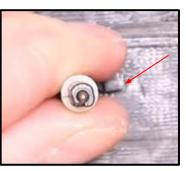

Download or Print Instructions | Contact: help@mcarbo.com | Page 5

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.




Step 17: Compress the Striker Spring and Remove the Two Retaining Caps, Then let the Spring slowly rise up.





Step 18: Replace the Green Factory Striker Spring with the New MCARBO Spring.

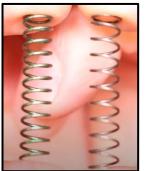





Step 19: Compress the Striker Spring on the Bench Block again and Reinsert the Retaining Caps.






Step 20: Insert the Striker Assembly back into the Slide.

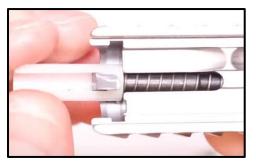

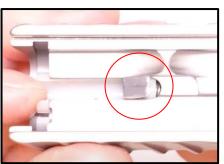


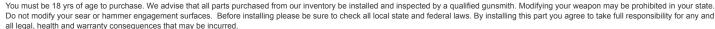




Step 21: Use your Micro-Tip to Compress the Striker as you Reattach the Back Plate.



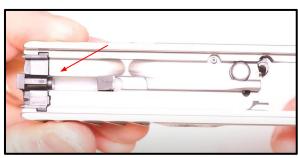

Step 22: Check the Operation of the Striker Block Safety and Extractor.

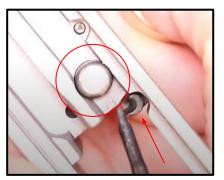

Step 23: Insert the Barrel and Guide Rod back into the Slide.

Then set the Slide aside.




Step 24: Grab the Frame. Use your 1/8" Punch and Hammer to Tap out the Trigger Hinge Pin.





Download or Print Instructions | Contact: help@mcarbo.com | Page 7

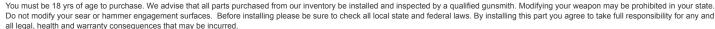



Step 25: Remove the Locking Block from the Frame.



Step 26: Remove the Slide Stop Assembly.



Step 27: Maneuver the Trigger and Trigger Bar out of the Frame. The Trigger Bar should be captured by the Sear Housing.




Step 28: Remove the Factory Trigger Return Spring from the Trigger Assembly.





Download or Print Instructions | Contact: help@mcarbo.com | Page 8

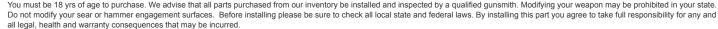



Step 29: Install the New MCARBO Trigger Return Spring in the Same Orientation.






Step 30: Insert the MCARBO Assembly Tool Through the Loop of the Spring to Capture it.






Step 31: Reinstall the Trigger Assembly into the Frame. Make sure to Hook the Trigger Bar back onto the Sear Housing

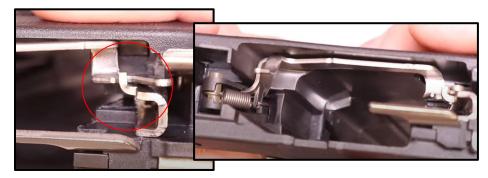

Step 32: Reattach the Slide Stop Assembly to the Frame.



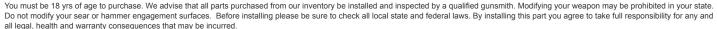




Step 33: Reinsert the Locking Block into the Frame.






Step 34: Check that the Slide Stop Spring Leg is sitting on top of the Slide Stop.

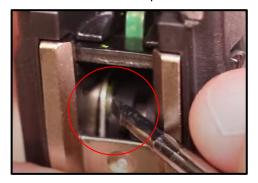

Step 35: Compress the Locking Block and Insert the Trigger Hinge Pin.




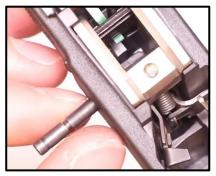

Step 36: Use your Micro-Tip to Maneuver the Slide Stop until the Trigger Hinge Pin has Clearance





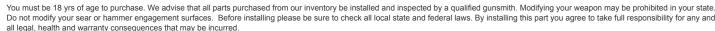




Step 37: Push the Hinge Pin down on the Table. Look through the Hole as you push through to make sure it goes through.






Step 38: Once the Pin has started to Push Through, Stop and Make sure the Trigger Return Spring is captured on the Pin. Use your Micro-Tip to align the Spring on the Pin if needed.



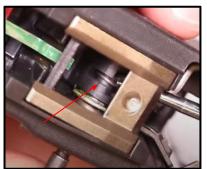


Step 39: Push the Hinge Pin the rest of the way through. It should Push Out the Assembly Tool.

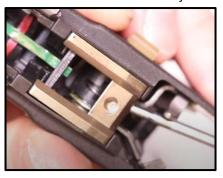

Step 40: Push the Trigger Hinge Pin in Slightly. You should hear it click and Locate on the Slide Stop.





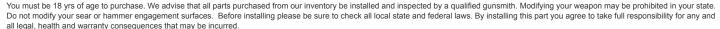



Step 41: Pull the Trigger. Make sure everything is Operating Smoothly.



Step 42: Reattach the Slide.



Step 43: Perform a Function Check. Test the Safety, Trigger Pull and Trigger Reset.



Step 44: You're Good to Go! Happy Shooting!

