

LIST OF PARTS

1	Frame *	36	Magazine Body *
2	Slide Stop *	37	Magazine Base *
3	Slide Stop Spring *	38	Magazine Base Lock
4	Slide Stop Spring Pin	39	Magazine Spring *
5	Trigger *	40	Follower *
6	Trigger Pin	41	Recoil Spring *
7	Trigger Bar *	42	Recoil Spring Guide *
8	Trigger Spring	43	Barrel *
9	Pin (3x)	44	Slide *
10	Ejector *	45	Front Sight
11	Sear *	46	Front Sight Pin
12	Sear Spring	47	Loaded Chamber Indicator *
13	Sear Pin *	48	Loaded Chamber Indicator Spring *
14	Firing Pin Block Lever	49	Loaded Chamber Indicator Nut *
15	Firing Pin Block Lever Spring	50	Extractor *
16	Hammer *	51	Extractor Pin
17	Disconnecter *	52	Extractor Spring
18	Hammer Pin	53	Rear Sight *
19	Hammer Pin Retaining Peg	54	Firing Pin
20	Main Spring Strut *	55	Firing Pin Spring
21	Main Spring	56	Securing Screw *
22	Main Spring Plug *	57	Firing Pin Coiled Pin
23	Main Spring Plug Pin	58	Firing Pin Block Stop
24	Magazine Guide	59	Firing Pin Block Stop Spring
25	Magazine Guide Pin	60	Hammer Decocking Lever Controller *
26	Grip Panel - Left *	61	Decocking Lever *
27	Grip Panel - Right *	62	Decocking Lever Spring *
28	Grip Panel Screw (2x)	63	Fixing Insert *
29	Safety *	64	Safety - Right *
30	Safety Detent Plunger *	65	Safety Detent Plunger - Right *
31	Safety Detent Plunger Spring *	66	Hammer Decocking Lever Controller - Right *
32	Magazine Catch *	67	Fan-shaped Washer (2x) *
33	Magazine Catch Spring		
34	Trigger Bar Spring		
35	Magazine Catch Spring Screw		

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.

