

INSTRUCTION MANUAL INSERT FOR

RUGER® LCP™

PARTS LIST AND EXPLODED VIEW DRAWING

Key No.	Part Name	Part No.	Model
* 1	Slide	SC00100	LCP
2	Firing Pin Retainer	SC05150	LCP
3	Extractor Spring	SC06450	LCP
4	Extractor Plunger	SC04600	LCP
5	Extractor	SC01400	LCP
6	Firing Pin Spring	SC01800	LCP
7	Firing Pin	TSC01100	LCP
8	Guide Rod	SC02900	LCP
9	Recoil Spring, Inner	SC02810	LCP
10	Recoil Spring, Outer	SC02811	LCP
* 11	Barrel	SC00600	LCP
12	Frame Insert	SC00250	LCP
13	Trigger	SC03900	LCP
14	Trigger Pin	SC03950	LCP
15	Trigger Pivot	SC06710	LCP
16	Hammer Catch Spring	SC06450	LCP
17	Hammer Pivot Pin	SC02300	LCP
18	Trigger Bar	SC01700	LCP
19	Hold Open	SC00900	LCP
20	Takedown Pin Detent	SC05302	LCP
21	Hold Open Detent	SC05300	LCP
22	Hammer Spring Retainer Pin	SC05150	LCP
23	Hammer	SC04000	LCP
24	Frame	SC00200	LCP
25	Hammer Spring	SC00400	LCP
26	Trigger Spring	SC05400	LCP
27	Hammer Catch	SC02200	LCP
28	Magazine Latch Catch	SC02600	LCP
29	Frame Insert Pin, 2 Req'd	SC06305	LCP
30	Takedown Pin	SC03750	LCP
31	Hammer Catch Pin	SC02350	LCP
32	Magazine Latch Spring	SC02700	LCP
33	Hammer Spring Seat Pin	SC02500	LCP
34	Hammer Spring Seat	SC02400	LCP
35	Magazine, Complete	SC00500	LCP
36	Spacer	KSC04700	LCP

*PARTS SO MARKED MUST BE FACTORY FITTED

STURM, RUGER & Company, Inc.
200 Ruger Road
Prescott, Arizona 86301 U.S.A.

RUGER® LCP™ EXPLODED VIEW

