

FULL ASSEMBLY

FRAME PIN (2)

01-030

DISASSEMBLY PIN

01-037



**This page contains ITAR-restricted data.*

FRAME PARTS LIST

FRAME	01-008
MAGAZINE RELEASE	01-013
END CAP PIN	01-023
END CAP	01-033
MAGAZINE RELEASE SPRING	01-034



**This page contains ITAR-restricted data.*

RECEIVER PARTS LIST


RECEIVER	01-007
TRIGGER	01-010
TRIGGER BAR	01-014
PLUNGER SPRING	01-015
TRIGGER SPRING	01-016
TRIGGER CAM	01-018
HAMMER	01-022
HAMMER SPING PIN	01-031
HAMMER AXIS PIN	01-024
HAMMER SPRING	01-025
SLIDE HOLD SPRING	01-028
EJECTOR PIN	01-029
EJECTOR	01-032
SLIDE HOLD	01-036
SAFETY LEVER RIGHT	01-048
SAFETY LEVER LEFT	01-049
PLUNGER	01-053
SAFETY LEVER SCREW	01-054



**This page contains ITAR-restricted data.*

SLIDE PARTS LIST

SLIDE	01-009
EXTRACTOR	01-012
FIRING PIN SPRING	01-020
EXTRACTOR PIN	01-026
EXTRACTOR SPRING	01-027
FRONT SIGHT	01-038
FIRING PIN	01-039
REAR SIGHT	01-040
BARREL	01-041
FIRING PIN RETAINER	01-052
RECOIL SPRING SUBASSEMBLY	01-056
REAR SIGHT ADJUSTMENT SCREW	01-058

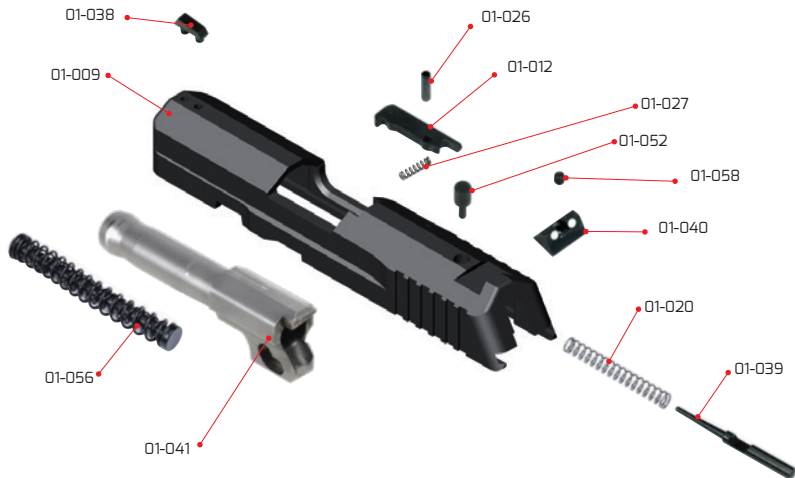

**This page contains ITAR-restricted data.*