

▲ For the accompanying figure to the list, see page 30.

Essential information when ordering spare parts

- Pistol model (calibre, designation)
- Pistol serial number
- Item number and index
- Part designation

Index explanation

- B = P 226 Sport
- C = P 226 DAO
- * = not for P 226 DAO
- ° = sheet metal slide

▲ Never install a standard hammer **29** in a DAO pistol.

Item	Designation	Item	Designation	Item	Designation
1	Barrel	16	Takedown lever	37	Hammer stop
2	Recoil spring guide	17	Locking insert	38	Reset spring
3	Recoil spring	18	Slide catch lever	39	Hammer stop pin
4, 4 B	Slide	19	Slide catch lever spring	40 *	Decocking lever
5	Front sight 05/06/07/08/09/10	20	Trigger	41 *	Decocking lever bearing
6	Rear sight 04/05/06/07/08/09/10	21	Trigger pivot	42 *	Decocking lever spring
6 B	Micrometre rear sight	22	Trigger bar	43	Magazine catch
7 °	Roll pin, heavy	23	Trigger bar spring	44	Support plate
7	Firing pin bolt	24	Sear	45	Magazine catch spring
8 °	Roll pin, heavy	25	Sear spring	46	Magazine catch stop
8	Extractor spring	26	Pivot, sear and safety lever	47	Catch stop spring
9 °	Breechblock	27	Roll pin, heavy	48	Grip plate, right
9	Extractor bolt	28	Safety lever	49	Grip plate, left
10, 10 °	Extractor	29, 29 C	Hammer	50	Grip plate screw
11	Firing pin	30	Hammer strut pin	51	Magazine tube
12	Firing pin spring	31	Hammer pivot pin	52	Magazine spring
13, 13 °	Safety lock	32	Ejector	53	Feeder
14, 14 °	Safety lock spring	33	Hammer strut	54	Magazine floorplate
15	Frame	34	Mainspring	55	Floorplate insert
		36	Mainspring seat		