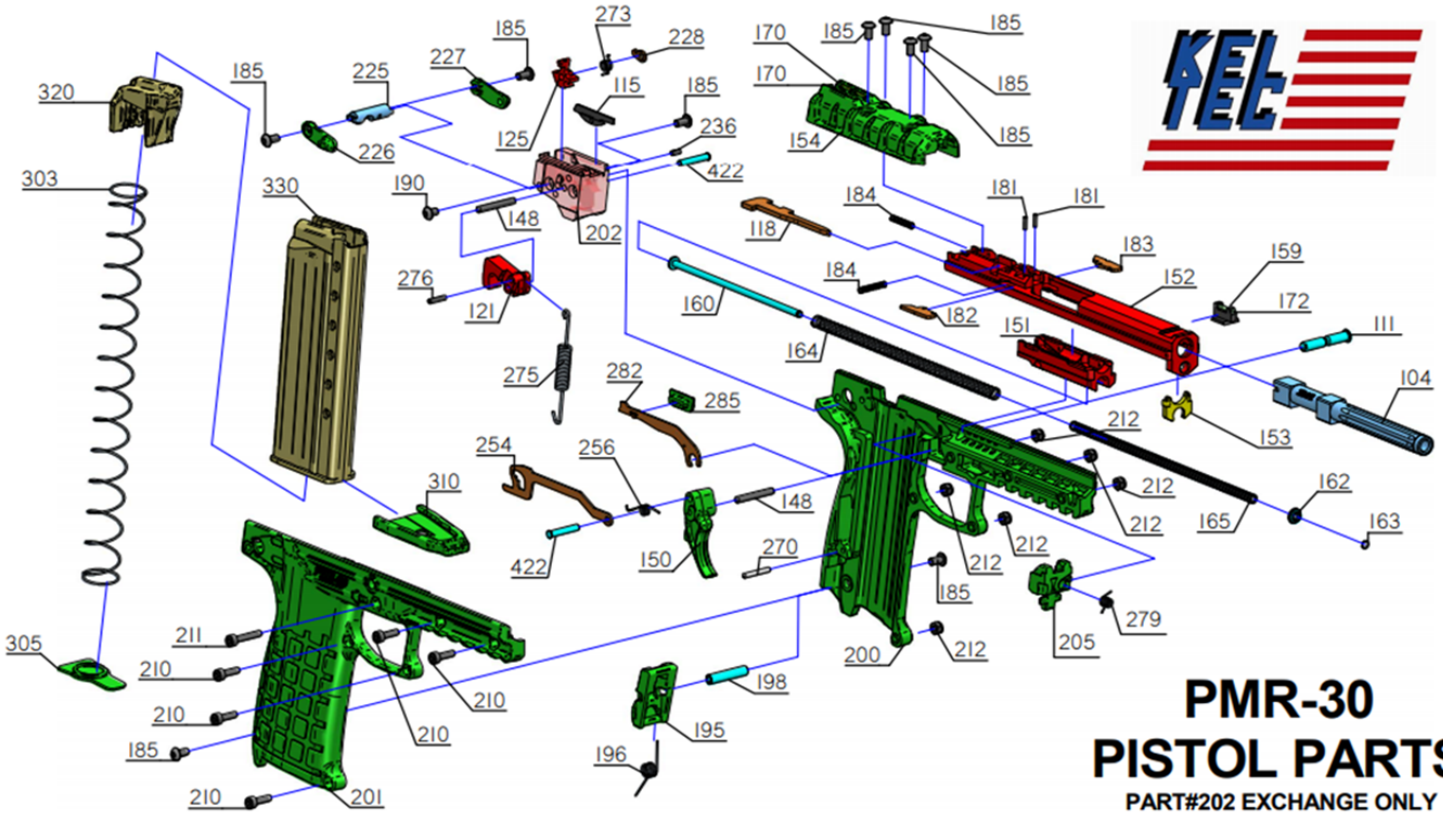

PMR-30
PISTOL PARTS

PART#202 EXCHANGE ONLY

104 BARREL 4.3
111 ASSEMBLY PIN
115 EJECTOR
118 FIRING PIN
121 HAMMER
125 SEAR
148 TRIGGER AXIS
150 TRIGGER
151 BARREL BLOCK
152 SLIDE
153 BUFFER
154 SLIDE COVER
159 FIBER FRONT SIGHT
160 RECOIL SPRING GUIDE
162 RECOIL SPRING CATCH
163 RECOIL SPRING GUIDE LOCK RING
164 OUTER RECOIL SPRING
165 INNER RECOIL SPRING
170 REAR SIGHT FIBER
172 FRONT SIGHT FIBER
181 EXTRACTOR AXIS
182 EXTRACTOR RIGHT
183 EXTRACTOR LEFT
184 EXTRACTOR SPRING
185 SLIDE COVER SCREW
190 RECEIVER SCREW
195 MAG CATCH
196 MAG CATCH SPRING
198 MAG CATCH AXIS
200 GRIP LEFT
201 GRIP RIGHT
202 RECEIVER
205 FEEDRAMP
210 M3-10 SOCKET HEAD
211 M3-16 SOCKET HEAD
212 M3 NUT
225 SAFETY
226 SAFETY LEVER RIGHT
227 SAFETY LEVER LEFT
228 SAFETY SNAP
236 EJECTOR PIN
254 TRIGGER BAR
256 TRIGGER SPRING
270 HAMMER SPRING CATCH
273 SEAR SPRING
275 HAMMER SPRING
276 HAMMER SPRING PIN
279 SLIDE STOP SPRING
282 SLIDE STOP BRAZEMENT
285 SLIDE STOP BUTTON
303 MAGAZINE SPRING
305 MAGAZINE SPRING PLATE
310 MAGAZINE BOTTOM PLATE
320 MAGAZINE FOLLOWER
330 MAGAZINE BODY
422 SEAR AXIS