



# M\*CARBO Hi-Point Carbine Extended Charging Handle



Download or Print Instructions | Contact: [help@mcarbo.com](mailto:help@mcarbo.com) | Page 1

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 1: Clear your Firearm - Check the Chamber, Bolt Face and Magazine Well.



1. MCARBO Hi-Point Carbine Extended Charging Handle
2. 8mm Socket Wrench
3. Blue 242 Loctite

Step 3: Use your 8mm Socket Wrench to Loosen and Remove the Bolt.



Step 2: Gather Parts and Tools needed for Installation.



Step 4: Open up your MCARBO Hi-Point Carbine Extended Charging Handle.





# M\*CARBO Hi-Point Carbine Extended Charging Handle




Download or Print Instructions | Contact: [help@mcarbo.com](mailto:help@mcarbo.com) | Page 2

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.




Step 5: Slide the Bolt out of the Factory Handle and into the New M\*CARBO Handle.

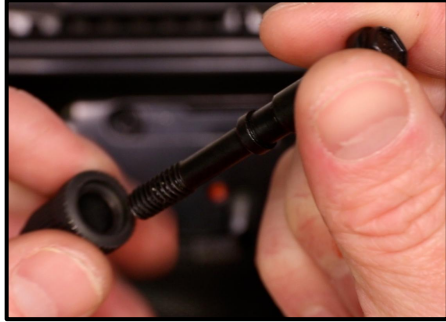

Step 7: Drop in the Bolt and Tighten up with the Socket Wrench. The Handle should still wiggle a bit.



Step 6: Put some Blue 242 Loctite on the Threads of the Bolt.

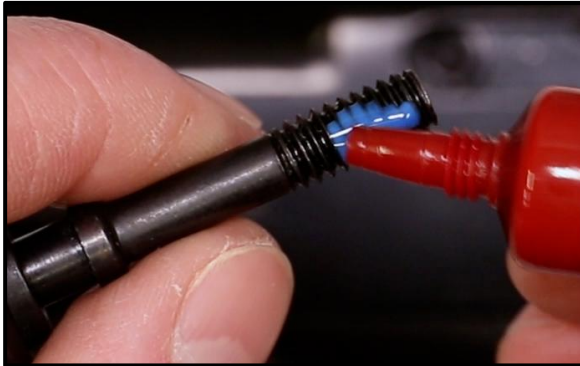

Step 8: That's it! Make sure it Locks Properly and You're Done!

