



M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide



Download or Print Instructions | Contact: help@mcargo.com | Page 1


You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 1: Clear your Firearm - Check the Chamber, Bolt Face and Magazine.



Step 2: Gather Parts and Tools Needed

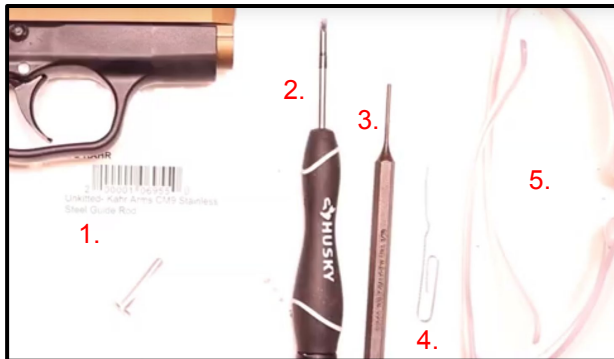

1. M*CARBO CM9 Stainless Steel Striker Guide
2. Micro Tip Flat Head Screwdriver
3. 1/16th Inch Punch
4. Paper Clip
5. Safety Glasses

Step 3: Start by pulling your slide back to where the slide meets up with the half-moon like feature on the slide stop.



Step 4: You will then take your 1/16th Inch Micro Tip Flat Head and pop out the slide stop, and place it to the side.





M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide

Download or Print Instructions | Contact: help@mcarbo.com | Page 2



M*CARBO
MILITARY • GREEN • BROUWERHOOD

You must be 18 years of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 5: Depress the trigger and pull forward on the slide. Set the pistol grip frame aside.




Step 6: Now we're gonna focus on the side assembly by removing the recoil spring and captured guide rod.





Step 7: Next remove your barrel.



Step 8: Now you will need to remove the back plate, but to do that you will start by removing the **extractor first**.

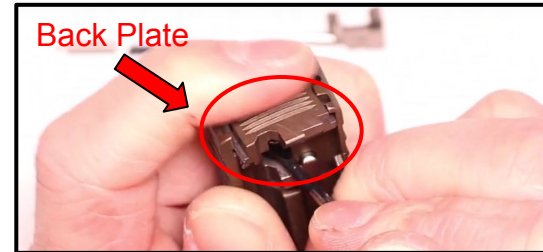

Step 9: To start removing the extractor, you will need your micro tip screwdriver to push back on that pin. It will relieve the tension that's on the extractor so you can remove it.

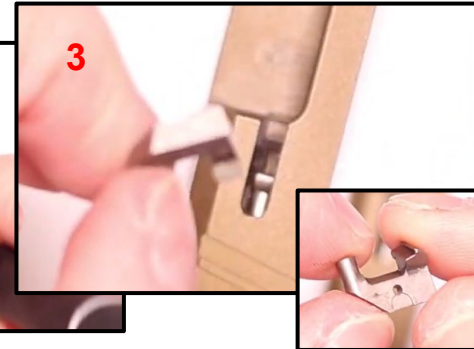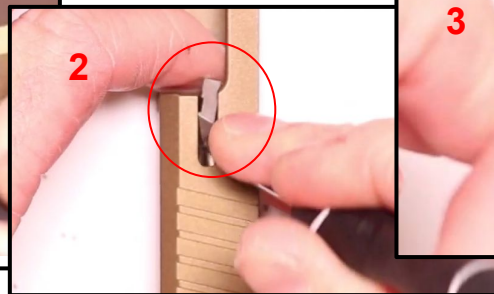



M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide

Download or Print Instructions | Contact: help@mcargo.com | Page 3




You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 10: Now that you've removed the extractor, place it to the side and grab your paper clip. You will need it to push the out the front pin, extractor spring and rear pin.



Step 11: You are going to re-assemble those parts later on, so place them to the side in this order.

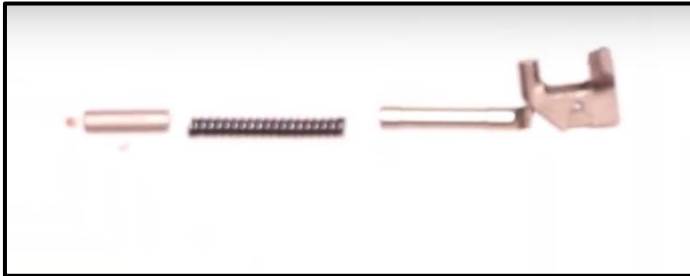

Step 12: Next you will start by compressing that striker spring, which will allow you to slide that back plate off. Be careful when releasing the striker spring, as it is under tension.

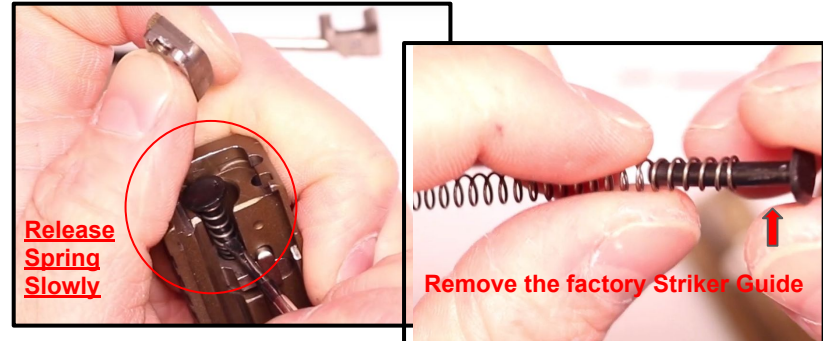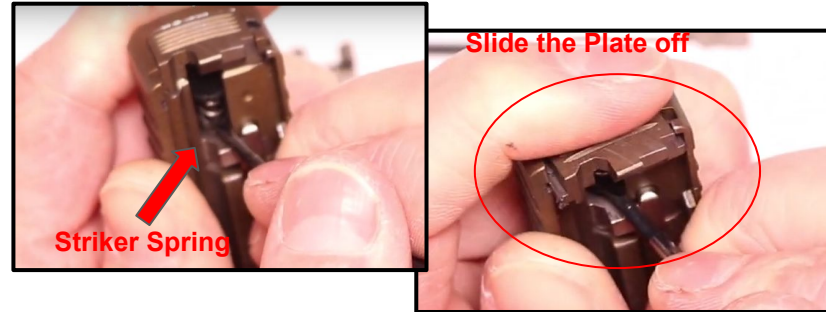



M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide

Download or Print Instructions | Contact: help@mcargo.com | Page 4



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 13: Take your new M*CARBO Striker Guide Rod and place it in the recoil spring and put it to the side for now.



Step 14: Now you'll need to get your extractor assembly back into place. Start by putting the extractor back into the slide.





M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide


Download or Print Instructions | Contact: help@mcarbo.com | Page 5



M*CARBO
MILITARY * GREEN * BROUWERHOOD

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.


Step 15: You're going to feed the rest of the items back in starting with the front pin. It has that 45 degree angle and you want that facing forward when going in.

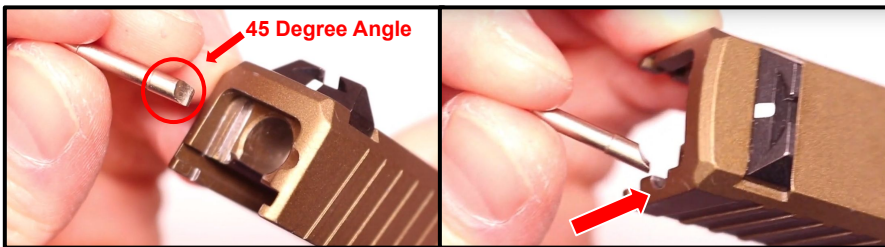

Step 16: Next take your paper clip and push the front pin all the way down until you can see that it has located.



Step 17: Take your extractor spring and drop it into that hole next.

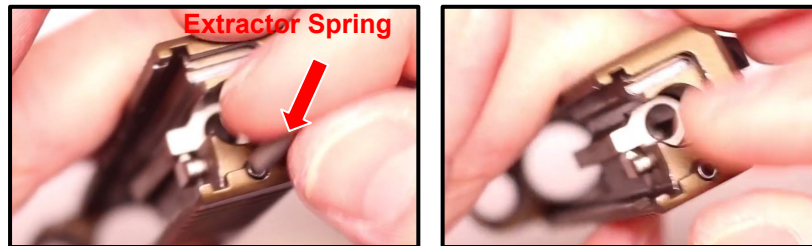

Step 18: Then take your rear extractor pin and place it in next. Following, you want to use your punch to push it down and make sure it's completely compressed.





M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide

Download or Print Instructions | Contact: help@mcargo.com | Page 6





You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 19: Take your striker spring and striker spring guide and dropping them in, and compressing them down.



Step 20: Now you're going to put your back plate into place again. Your stainless steel striker guide is going to locate in that pocket shown below. You want to first slide that plate in just a bit, compressing the striker spring and guide down with your finger so you can capture the plate. Then using your punch, compress down on the extractor spring assembly enough to slide the back plate back in.

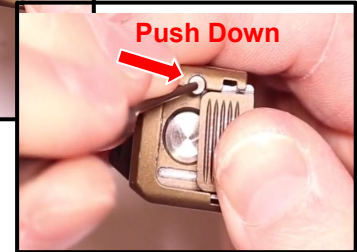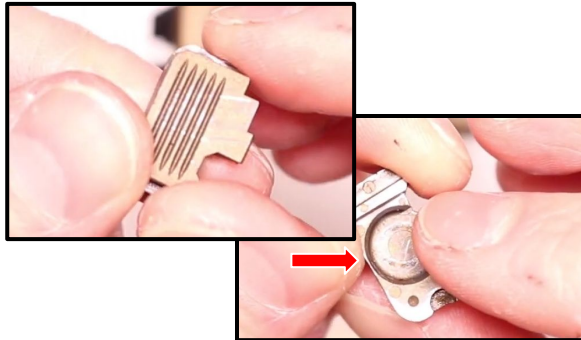



M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide



Download or Print Instructions | Contact: help@mcargo.com | Page 7

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 21: Now that you've re-assembled your slide with your new M*CARBO Stainless Steel Striker Guide, you can go ahead and put the rest of it back together. Put your barrel back in the slide, then take your recoil spring and guide rod, compressing them and making sure it locates correctly when putting it into place.



Step 22: Put the slide back on the frame.



Step 23: Now line up the lug in the barrel with that hole in the frame and drop in the slide stop.



Step 24: Once the slide stop is inserted, get those half-circles to line up. Then push it all the way through





M*CARBO KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide

Download or Print Instructions | Contact: help@mcargo.com | Page 8



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



You've now completed the **KAHR CM9 / CW9 / PM9 Stainless Steel Striker Guide** installation!
Happy Shooting!

