

M*CARBO KEL-TEC P11 Stainless Steel Guide Rod And Max Control 20lb Recoil







all legal, health and warranty consequences that may be incurred.



Step 3: Rack the slide and take flat tip screwdriver and remove the takedown pin



Step 2 : Parts needed:

- Microtip flathead screwdriver
- 1/16" punch
- M*CARBO Recoil Spring
- M* CARBO SS ROD



Step 4: Pull slide forward, comes right off





M*CARBO KEL-TEC P11 Stainless Steel Guide Rod And Max Control 20lb Recoil **Spring**Download or Print Instructions | Contact: help@mcarbo.com | Page 2







You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 5: Remove the plastic guide rod and spring, pops right off



Step 6: Get your M*CARBO Stainless steel Guide Rod and Recoil Spring, and place the guide rod in the spring



Step 7: Place guide rod and recoil spring back into the slide





Step 8: Place the slide back on the frame





M*CARBO KEL-TEC P11 Stainless Steel Guide Rod And Max Control 20lb Recoil










You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 9: Take 1/16" punch and drop it in the takedown pin hole, place the slide back and make sure the logs are lined up in the barrel

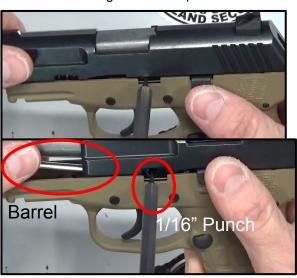


Step 10: Take your takedown pin and drop it right in, and make sure the ledge is on the bottom, and press on it until you hear it snap into place





Step 11: Place the slide forward again.

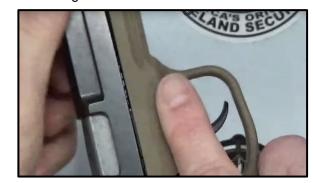

Step 12: Slide back and forth to make sure everything is in place

