

Download or Print Instructions | Contact: help@mcarbo.com | Page 1



Step 1: Clear your Firearm - Check the chamber, bolt face and magazine well.



Step 2: Gather the tools that are needed for the Installation.



Step 3: Start by pulling the Slide back and push up on the Safety Lever that doubles as your Slide Stop.



Step 4: Now you will have access to the Roll Pin.

- Hi Point C9 Trigger Spring Kit
- 2. Bench Block
- 3. Hammer
- 4. 1/8 Inch Punch
- Micro Tip Flat-head Screwdriver
- 6. Phillips Head Screwdriver
- Eye Protection





Download or Print Instructions | Contact: help@mcarbo.com | Page 2



Step 5: Next you're going to set your Firearm on the Bench Block and use your 1/8th Inch Punch and tap out the Roll Pin.



Step 6: Now pull back, pull up and slide the Slide off.



Step 7: Slide the Slide until it comes completely off.





Step 8: Set your Slide aside and now you're going to focus on your Frame.





Download or Print Instructions | Contact: help@mcarbo.com | Page 3



Step 9: You will find your Recoil Spring and Guide Rod at the front of the Frame. Put them out of the Frame, keep them together and set them aside.



Step 11: Press down on the Sear using your Micro Tip Flat Head Screwdriver so that you can release it from the linkage on the side.



Step 10: Next you're going to focus on the Sear located at the back of the Frame.



Step 12: Next you're going to use your ½ Punch to continue to push down on the Sear and use your Screwdriver at the same time to pry out the linkage.






Download or Print Instructions | Contact: help@mcarbo.com | Page 4



Step 13: Once you pry the Sear from the Linkage, pull up on the Sear Spring.



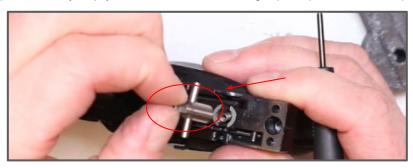

Step 14: Set your Sear aside and remove the Factory Sear Spring from the Frame.




HI-Point C-9
THIRD BOTHO KIT

WI-CARE
BILITARY CARRIES DROTTER BOTHO
1133333

2 00001 07926 9
HI-Point C9 Trigger Spring Kit

Step 16: Now take your MCARBO Sear Spring and drop it right into the Hole.

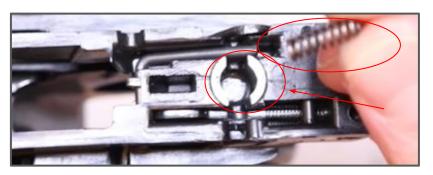



Download or Print Instructions | Contact: help@mcarbo.com | Page 5



Step 17: Next you're going to take Your Sear and place it on top of the Sear Spring. Make sure that the Counterweight is in place as well.





Step 18: Next you're going to take your Micro Tip Flat Head Screwdriver and your ½ Inch Punch and pop out the linkage before you compress the Sear.

Then get the piece of linkage over the post on the Frame.





Step 19: Next you should be able to see the linkage is captured on the Counterweight.



Step 20: Next you're going to finish the rest of the reassembly.





Download or Print Instructions | Contact: help@mcarbo.com | Page 6



Step 21: Grab your Recoil Spring and your Guide Rod and insert them back into the front of the Frame.



Step 22: Next you're going to take your Slide and put it back onto the Frame Pushing the Barrel through the big hole.



Step 23: Next you're going to lock the Slide and then set your Firearm onto your Bench Block and take your Hammer and tap your Roll Pin into the hole.





Step 24: Take your 1/2 Inch Punch and tap it with your Hammer to get the Roll Pin the Rest of the way in.





Download or Print Instructions | Contact: help@mcarbo.com | Page 7



Step 25: You're finished with the Installation, Happy Shooting!

