



# M\*CARBO KEL-TEC P-3AT Takedown Pin



Download or Print Instructions | Contact: [help@mcarbo.com](mailto:help@mcarbo.com) | Page 1



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



**Step 1:** Make sure your firearm is clear. Check the chamber, check the bolt face, and check the magazine well.


**Step 2:** Tools needed:

- A311 Stress-proof Carbon Steel Heavy Duty Takedown Pin.
- Micro-tip flat head screwdriver.

**Step 3:** First, take your micro-tip flat head screwdriver and remove the factory takedown pin.



**Step 4:** Take your pin and make sure the notch is facing up. Begin to slide the pin in.

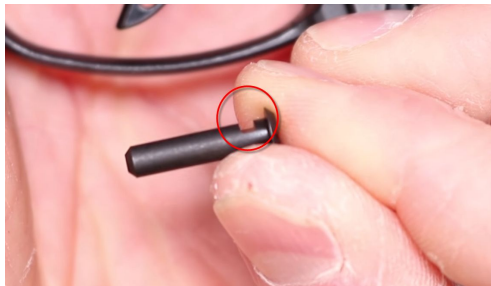

**Step 5:** Position the pin to where the small dimple is facing up. Then push the pin fully in place and rotate it to where the dimple is facing downward in the locked position.

