




Download or Print Instructions | Contact: help@mcarbo.com | Page 1

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 1

Make sure that your firearm is clear - check the chamber, bolt face, magazine tubes



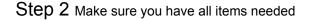

ITEMS NEEDED

- 1. Kel-Tec KSG Rubber Adhesive Grip Kit
 - *Includes Alcohol Wipe
- 2. Hair Dryer or Heat Gun
- * Take Caution if using a Heat Gun; use on a low setting to ensure surfaces are only warmed, not melted or burned.








Download or Print Instructions | Contact: help@mcarbo.com | Page 2

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 3

Before removing the backing on the Grip, align it on the firearm to ensure it is the right fit

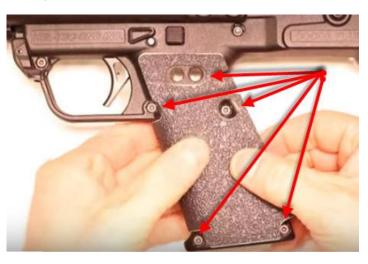

Step 4

Use the Alcohol Wipe to wipe down the full pistol grip surface, especially all edges. This will ensure all dirt, grease, and oils are removed for the best adhesion. Be sure to get the back strap and top portion where the crease of your thumb rests. Continue cleaning until the wipe is fully used.



Step 5

Let the grip air-dry for several minutes. Do not use any type of towel to dry the grip, as these will leave behind lint / small residue that will create issues when attempting to adhere the adhesive grip.







Download or Print Instructions | Contact: help@mcarbo.com | Page 3

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 6

Use the heating tool to warm the entire surface of the firearm grip.

This will do several things:

- Speed up the drying process
- Create a warm base for the adhesive to better stick The adhesive activates with heat and will mold better to the

fire addressive activates with heat and will mold better to the firearm grip.

*The temperature of the grip should be no warmer than 130 degrees, equivalent to a fresh cup of hot coffee.




Step 7

Take the large Rubber Grip and peel off the back. Try to avoid touching the edges, and only touch the center of the grip. Once the adhesive is exposed, line up one side of the grip, and lightly tack down to hold it in place without committing to fully applying.

Slowly wrap the rubber grip around the firearm grip and take care to align the center. Continue slowly wrapping the grip and tack the other side down, ensuring that it is properly aligned on each side.

*It is ok to pull the wrap slightly to ensure alignment, but do not stretch the adhesive grip. The small slits and cuts along the edges are designed to fit the curves and angles of your firearm.

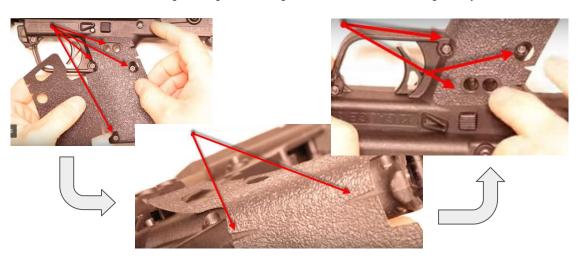





Download or Print Instructions | Contact: help@mcarbo.com | Page 4

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 8


Once you are happy with the alignment, begin smoothing down the adhesive grip, starting at the front and smoothing out to the edges.

This method, along with the cut-outs along the edges, will ensure a smooth application without leaving any bubbles or ripples in the adhesive grip.



Step 9

Take the smaller piece for the back strap and remove the backing to reveal the adhesive. Align the circular portion at the top, making sure it is on the flat part, and using the slits to mold with the curve and avoid ripples. Lightly tack it down while centering along the back of the firearm grip.

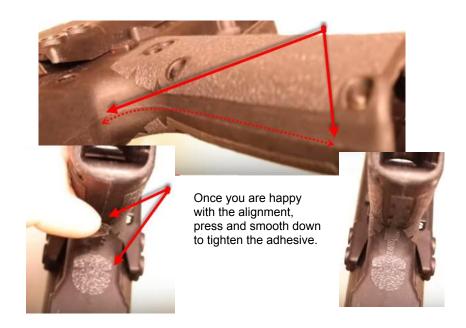





Download or Print Instructions | Contact: help@mcarbo.com | Page 5

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 10

Take your heating tool and warm the entire surface of the adhesive grip, again ensuring that you do not melt or burn the grip. Pay special attention to the backstrap and the edges, as these will be the first to show signs of peeling if they are not properly adhered down. When the entire grip is warmed, **grip tightly** all the way around and press for 2-3 minutes.

Repeat this step 3 times in total to guarantee absolute adhesion.

During the second round, pay extra attention to the edges and making sure that any chance of the edges snagging or letting any dirt, grease, or oil under the seel.

Step 11

Once you are finished, you should see that the adhesive has conformed around all the small details of the firearm.

Let the grip cool for 20-30 minutes before using or storing the firearm.









