



M*CARBO
MILITARY • OUTDOOR • AIRSOFT

M*CARBO PMR 30 GRIPS

Download or Print Instructions | Contact: help@mcargo.com | Page 1



M*CARBO
MILITARY • OUTDOOR • AIRSOFT

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 1: Clear your Firearm - Check the Chamber, Bolt Face and Magazine.




Step 2: Gather Materials Needed for Installation.



1. MCARBO PMR 30 Grips
2. Alcohol Prep Pad (Included with Grips)
3. Heat Gun or Hair Dryer

Step 3: Take the grip and wrap it around the Frame. Make sure that you have the right one and that it fits correctly and that it is lined up with the holes.

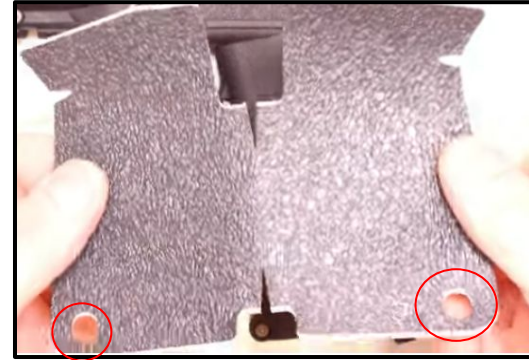



M*CARBO PMR 30 GRIPS

Download or Print Instructions | Contact: help@mcargo.com | Page 2



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



Step 4: Use your Alcohol Prep Pad to wipe down the Frame and get all the dirt and grease off the Firearm.



Step 5: Peel off the back of the grip and try not to touch the adhesive.



Step 6: Place Grip on the Frame. Line up the “V’s” in that seam line.



Step 7: Lightly pull the Grip and center it but do not stretch it out too much. It is made to line up with the holes on the Frame.





M*CARBO
MILITARY • OUTDOOR • BROTHERHOOD

M*CARBO PMR 30 GRIPS

Download or Print Instructions | Contact: help@mcargo.com | Page 3



M*CARBO
MILITARY • OUTDOOR • BROTHERHOOD

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

Step 8: Once Grip is applied all around evenly, smooth out any air bubbles that you may see.



Step 9: Take the Back Strap and get it situated between the Main Grip.



Step 10: Repeat the same process as the main Grip application. Remove backing and try not to touch the adhesive. Smooth down onto the Frame.



Step 11: Using your Heat Gun or Hair Dryer, you need to heat your Grip to 130° degrees or the equivalent to a hot cup of coffee.





M*CARBO
MILITARY • OUTDOOR • BROTHERHOOD

M*CARBO PMR 30 GRIPS

Download or Print Instructions | Contact: help@mcargo.com | Page 4



M*CARBO
MILITARY • OUTDOOR • BROTHERHOOD

You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.


Step 12: Apply the heat evenly over the entire Grip. Be careful not to overheat the Grip because it will cause it to shift.



Step 13: Once you're done heating your Grip, delicately push down on the Grip with your thumbs and apply pressure all the way around.



Step 14: Continue to heat your Grips three more times. Once you're done heating. Let it cool for 20-30 minutes.

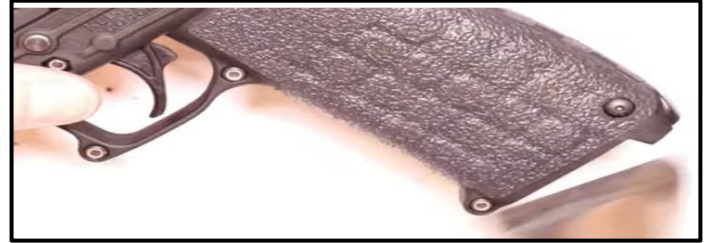

Step 15: Continue to press down all around the Grip until you see the contour, then you're finished with your Grip installation. Happy Shooting!

