



# M\*CARBO Recoil Buffer

Download or Print Instructions | Contact: [help@mcarbo.com](mailto:help@mcarbo.com) | Page 1



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.




**Step 1:** Clear your Firearm - Check the chamber, bolt face and magazine well.



**Step 2:** Fold your Sub 2000 in half. Press down on the hard plastic recoil buffer. Then pull out that buttstock pin.



**Step 3:** Remove the hard plastic buffer and the buttstock

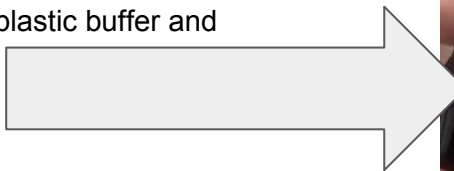




# M\*CARBO Recoil Buffer

Download or Print Instructions | Contact: [help@mcargo.com](mailto:help@mcargo.com) | Page 2



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.



**Step 4:** Pull up on the charging handle and you will be able to change it out with M\*CARBO Recoil Buffer.



**Step 5:** Slide the Recoil Buffer over top of the recoil spring inside of the receiver tube. Pull the charging handle to bring it down.



**Step 6:** Put the buttstock back on, Place the hard plastic buffer at the end. Line up the holes to put the buttstock pin back in place.

**Step 7:** Finally, Check the operation of the Sub 2000